



PELOUSA  
Instructio

 


## Safety notes

- Please read this instruction manual carefully before using this product, and use it correctly.
- The following warnings and cautions are important for safety, so please be sure to observe them.

**All of these are important safety items, so be sure to follow them.**

The contents to be observed are explained with the following symbols.

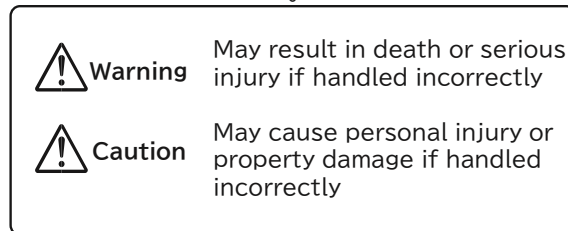

※ After reading this instruction manual, fill in the date of purchase, customer's name, address, and the store name in the warranty column below, and store it in a place where users can easily access it.

## Warning



Fire

This product uses a lithium-ion battery, so do not use, charge or leave it in a place subject to heat, high temperature or high humidity. There is a risk of failure or fire due to ignition or generation of heat.



Electric shock

Do not disassemble, repair, or modify this product by yourself. There is a risk of injury, fire and electric shock.



Injury

Keep out of reach of children. If you have a physical disability, please do not use it without an attendant. There is a risk of injury, fire and electric shock.

Do not use or leave near flammable materials such as cloth or paper. There is a risk of fire.



No liquids

This product is not waterproof. Do not touch it with wet hands, splash it with water, wash it, or use or store it in a bathroom or other places with water. Also, do not use it when your hair is wet. There is a risk of failure, electric shock, and fire.



Prohibition

Do not use this product PELOUSA for any purpose other than pubic hair trimmer (unwanted hair heat treatment). There is a risk of failure, injury, electric shock, ignition or fire.



Warning

Do not use this product if you are pregnant, breastfeeding, menstruating, have allergies, have sensitive skin, are in the hospital, or have any other medical condition. If you absolutely want to use it, consult a doctor.

 Caution



Do not place the tip of the comb of PELOUSA on your skin for more than 5 seconds. It may cause burns.

Never use your fingers to pinch your skin between the gaps of the comb. It may cause burns.

Do not use it for more than 10 minutes continuously. When the comb becomes hot, even within 10 minutes, turn off the power and allow it to cool before using it again. Using it while it is hot may cause burns.



Please use 100v to 220v USB Type-C for charging. Never use any other charger. It may cause failure, ignition, or fire.

## Precautions



This product PELOUSA emits smoke because the hair is burned during use. For safety, the heat switch automatically turns off the heater circuit when pressed for 10 seconds. If the heater turns off, take your finger off the heat switch and press it again.



The heat switch cannot be pressed unless the main power is turned on. For safety, the wire will not heat up if you do not press the heat switch for 1 minute while the main power is on. In that case, turn off the main power, turn it on again, and press the heat switch.



Burned hair may accumulate in the comb when using this product. In that case, press the comb open button and use a cotton swab to gently remove the remaining hair in the comb. Be careful not to press the cotton swab strongly against the heating wire. It may cause failure or damage.




After using PELOUSA, lather soap well with a body towel or body sponge to wash away any burned residue left on the tips of the hair.



The heat wire cartridge is a replaceable item. After using for a certain amount of time, the heat wire may become deformed, bent, or cut. In that case, replace the heat wire cartridge (Sold separately).

## Name of each part / function

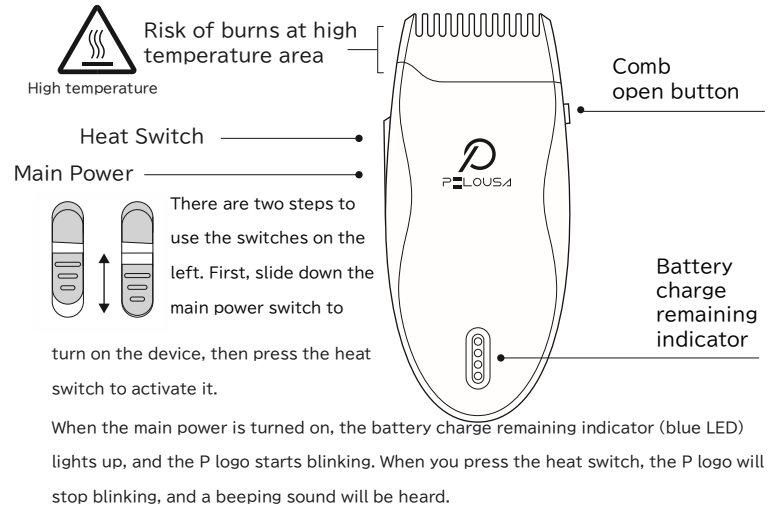

## Safety function

- ①The main power will automatically turn off in 1 minute if the heat switch is not pressed.
- ②The heat switch automatically turns off after being held down for 10 seconds. It can then be used by pressing it again.  
\*Please do not continue using it for more than 10 minutes continuously. The tip comb may become hot.
- ③The power cannot be turned on unless the heat wire cartridge is installed.
- ④For safety, the device is designed to turn off the power if the comb is accidentally opened during use. Please switch it on again to use.

### SPECIFICATION

POWER SYSTEM	Rechargeable
CHARGING TIME	90 minutes (usable time 20 minutes)
SIZE/WEIGHT	L110 x W50 x H20 (mm)/60g
CONTENTS	Main body, instruction manual
CHARGING CABLE FORMAT	USB Type-C (cable sold separately)

## How to use (long hair)

---


When using PELOUSA for the first time, when the hair is long, pinch the hair firmly with your middle finger, forefinger, and thumb. Hold PELOUSA parallel to your skin, and burn off the hair.



## How to use (short hair)

---


To make the hair shorter than 2 cm, or if you want to trim the soft part of the skin (U line), place the PELOUSA vertically on the skin and move it back and forth to burn off the hair in the same way as using an electric razor.

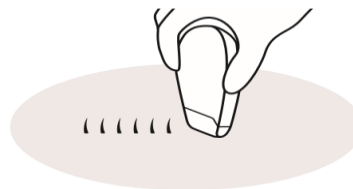

## How to use (medium hair)


---

To further shorten the hair (3 to 4 cm), place the comb of PELOUSA firmly to the skin at an angle of about 20 to 40 degrees and burn off the hair.

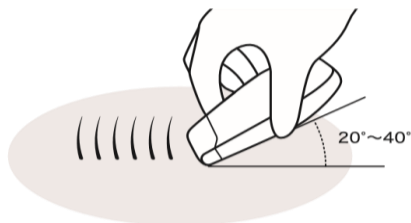

Caution

Never pinch the skin with your fingers and press PELOUSA against it, or never pinch your skin between the gaps of the comb. It may cause burns.

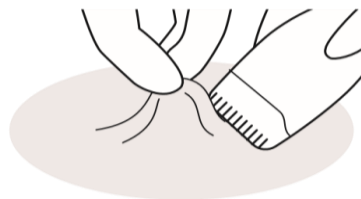




## Care after grooming

After grooming, lather soap well with a body towel or body sponge to wash away any burned residue left on the tips of the hair.

## Care during use



Burned hair may accumulate in the comb when using this product. In that case, press the comb open button and use a cotton swab to gently wipe out the remaining hair in the comb. Be careful not to press the cotton swab strongly against the heat wire. It may cause malfunction or damage.

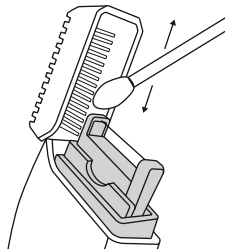


## Heat wire cartridge replacement




The heat wire cartridge is a replaceable item. If the heat wire is deformed or bent, the comb itself may become deformed by heat. If the heat wire is cut, the power will not turn on. Stop using it immediately and replace the heat wire cartridge.

## Cleaning of the main body

After using PELOUSA, press the comb open button and use a cotton swab or a soft toothbrush to wipe off the remaining hair in the main body. Do not press cotton swabs against the heat wire. It may cause malfunction or damage.

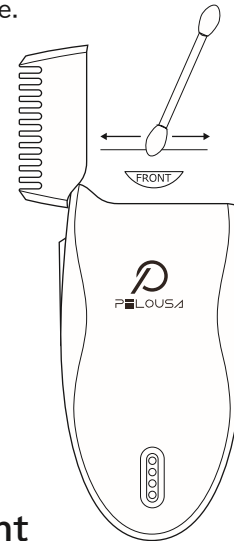

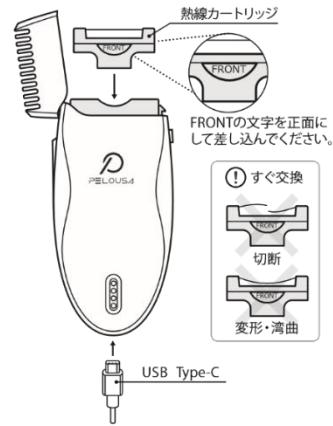

## Charging method

When the blue battery charge remaining indicator blinks less than before, charge with a commercially available USB Type-C or Micro USB with a USB Type-C adapter. When the four blue battery charge remaining indicators light up, the battery is fully charged.

## Troubleshooting

### ■Main power does not turn on (switch does not turn on)

Is the battery charged? Plug in the charging cable, turn on the main power, and check the battery charge remaining indicator.

\*Please check again before requesting repair.

If the heat wire in the cartridge is deformed, bent or cut, the power may not turn on. In that case, replace the heat wire cartridge. (Sold separately)

■ **Heat switch does not turn on**

**Slide up the main power switch and then slide it down again.**

## **Customer support**

- For inquiries regarding product information, usage, and after-sales service such as repair, please contact our service desk below.

**Service desk**

Business hours/Monday-Friday 10:00-17:00  
(except weekends and holidays)

TEL:03-6264-9650

PELOUSA LLC

3-9 Kodenmacho, Nihonbashi, Chuo-Ward, Tokyo 103-0001

## **Handling of personal information**

PELOUSA LLC will appropriately manage and handle personal information (name, address, etc.) collected from customers for the purpose of inquiries and after-sales service.

For inquiries regarding personal information, please contact our service desk listed in this document.

## Free warranty policy

1. If the customer uses the product correctly according to the instruction manual, and the product fails during the warranty period, it will be repaired free of charge.
2. For free repair, please bring the product and the warranty with you and consult with the shop where you purchased this product, or to our service desk listed in this manual. Please note that the customer will be responsible for the shipping fee if the product is sent directly to our service desk.
3. If you cannot return to the store where the product was purchased due to relocation or having received the product as a gift, please contact our service desk.
4. In the following cases, please note that you will be charged even during the free repair period.
  - (1) Failure or damage caused by the malfunction of connected equipment.
  - (2) Failure or damage caused by misuse or improper repair, modification or adjustment.
  - (3) Failure or damage caused by mishandling, dropping, or damage during transportation after purchase.
  - (4) Failure or damage caused by fire, earthquake, flood, lightning, or other natural disasters, pollution, or abnormal voltage.
  - (5) Failure or damage that occurs when used in a vehicle, ship, etc.
  - (6) When the warranty is not presented, or if the date of purchase, customer name, and store name are not listed on it, or when any of these have been changed
5. This warranty will not be reissued, so please keep it in a safe place.
6. This warranty is valid only in Japan.

## Warranty and after-sales service

- About warranty

The warranty is included in this instruction manual, so be sure to check the information such as “name of shop” and “date of purchase.” Please read the warranty details carefully and keep it in a safe place. The warranty period is one year from the date of purchase.

- Holding period of functional parts for repair

We will hold the functional parts for repair for 3 years after discontinuing production. These parts are required to maintain the functionality of the product.

- When requesting repair

Before requesting repairs, check the failure status according to “Troubleshooting” on page 13 of this instruction manual. If you still have a problem, stop using the product and contact the shop where you purchased the product.

- When the warranty period has expired

Please consult the store where you purchased the product. Paid repairs are available upon request if repairs can maintain the functionality of the product.

\*This warranty guarantees free repair service under the terms and conditions specified here.

This does not limit the customer’s legal rights, so if you have any questions about repairs after the warranty period, please contact the store where you purchased the product or our service desk listed in this manual.